

**ExactFit - Magnetic Phone Mount**

Cayenne 2003-2010

**READ BEFORE INSTALLATION**

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Due to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use only and should be installed by a qualified automotive technician.



**Part List:**

- (1) Mounting Bracket - P/N - PM07
- (1) P/N - PM01
  - Aluminum Ball
  - Magnetic Pad Assembly
  - Steel pads
- (1) Black S/S Socket Head Screw - 10/32 x .5" - MC91255A265
- (1) Round Head Torx Screw - #8 x 1" - MC 90925A199

1. Install the aluminum ball onto the metal bracket as shown using the supplied screw.
2. Remove the trim around the console by prying it away from the dash. (Photo 1)
3. Your mount can be installed on both driver and passenger side. Determine which side you will be installing on and remove the 2 screws on that side of the radio. (Photo2) Note: If your car has Navigation there will be 2 screws. If your car does not (like photo), there will only be the one upper screw and your kit comes with a new lower screw.
4. Install the metal bracket by pushing it between the plastic housing tabs and the dash pad. Now align the holes in the bracket with the holes you removed the screws from in step 3. Re-install the mounting screws.
5. Re-install the trim that was removed in step 2.
6. Remove the lock nut from the magnetic pad assembly, and install the nut over the top of the aluminum ball with the threads pointing out.
7. Snap the magnetic pad assembly over the aluminum ball and secure by tightening the lock nut.
8. Attach the metal plate to your phone case or phone. If you have a thick phone case, we recommend applying the metal plate to the outside of the phone case for maximum magnetic pull.
9. Attach the phone to your mount.
10. Enjoy your new Rennline product.

Photo 1



Photo 2



Photo 3

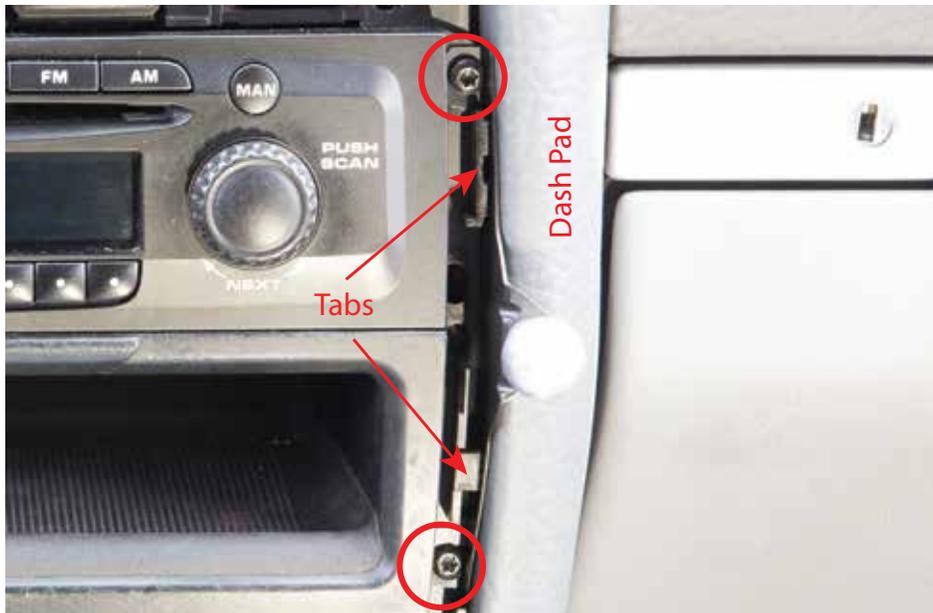


Photo 4

